

## Rear Panel

---

All switches covered by this guide use the rear panel shown below.

Figure D-1: DCS-7020SR-32C2



