

# ARISTA

## **Quick Start Guide**

**7050 Series1 RU (Gen3)  
Data Center Switches**

**Arista Networks**

[www.arista.com](http://www.arista.com)

PDOC-00141-07

<b>Headquarters</b>	<b>Support</b>	<b>Sales</b>
5453 Great America Parkway, Santa Clara, CA 95054 USA +1-408 547-5500	+1-408 547-5502 +1-866 476-0000	+1-408 547-5501 +1-866 497-0000
<a href="https://www.arista.com/en/">https://www.arista.com/en/</a>	<a href="mailto:support@arista.com">mailto:support@arista.com</a>	<a href="mailto:support@arista.com">mailto:support@arista.com</a>

© Copyright 2022 Arista Networks, Inc. All rights reserved. The information contained herein is subject to change without notice. The trademarks, logos and service marks ("Marks") displayed in this documentation are the property of Arista Networks in the United States and other countries. Use of the Marks are subject to Arista Network Term of Use Policy, available at <http://www.arista.com/en/terms-of-use>. Use of marks belonging to other parties is for informational purposes only.

# Contents

<b>Chapter 1: Overview.....</b>	<b>1</b>
1.1 Scope.....	1
1.2 Receiving and Inspecting the Equipment.....	1
1.3 Installation Process.....	1
1.4 Safety Information.....	2
1.5 Obtaining Technical Assistance.....	2
1.6 Specifications.....	2
<b>Chapter 2: Preparation.....</b>	<b>5</b>
2.1 Site Selection.....	5
2.2 Tools and Parts Required for Installation.....	6
2.3 Electrostatic Discharge (ESD) Precautions.....	7
<b>Chapter 3: Rack Mounting the Switch.....</b>	<b>9</b>
3.1 Two-Post Rack Mount.....	9
3.1.1 Attaching Mounting Brackets to the Two-Post Chassis.....	10
3.1.2 Inserting the Switch into the Rack.....	10
3.2 Four-Post Rack Mount.....	11
3.2.1 Attaching Mounting Brackets to the Four-Post Chassis.....	12
3.2.2 Assembling the Rails onto the Equipment Rack.....	12
3.2.3 Attaching the Switch to the Rack.....	14
<b>Chapter 4: Cabling the Switch.....</b>	<b>17</b>
4.1 Grounding the Switch.....	17
4.2 Grounding Adapter Assembly (DCS-7050SX3-48YC8).....	18
4.3 Connecting Power Cables.....	18
4.3.1 AC Power Supplies.....	19
4.3.2 DC Power Supplies.....	20
4.3.3 Connecting the DC Power Supply.....	21
4.4 Connecting Serial and Management Cables.....	23
<b>Chapter 5: Configuring the Switch.....</b>	<b>25</b>
<b>Appendix A: Status Indicators.....</b>	<b>27</b>
A.1 Front Indicators.....	27
A.1.1 Switch Indicators.....	27
A.1.2 Port Indicators.....	28
A.2 Rear Status Indicators.....	29
<b>Appendix B: Parts List.....</b>	<b>33</b>
B.1 Rack Mount Parts.....	33
B.1.1 Two-Post Rack Mount Parts.....	33
B.1.2 Four-Post Rack Mount Parts.....	33

B.2 Cables.....	34
B.3 Ground Extender Kit (Optional).....	34
<b>Appendix C: Front Panel.....</b>	<b>35</b>
C.1 Port-Speed Groups.....	35
C.2 Front Panels.....	35
<b>Appendix D: Rear Panel.....</b>	<b>43</b>
<b>Appendix E: Maintenance and Field Replacement.....</b>	<b>45</b>
E.1 Considerations.....	45
E.2 Power Supplies.....	45
E.2.1 Removing a Power Supply.....	45
E.2.2 Installing a Power Supply.....	46
E.3 Fan Modules.....	46
E.3.1 Removing a Fan Module.....	46
E.3.2 Installing a Fan Module.....	47
<b>Appendix F: Regulatory Model Numbers.....</b>	<b>49</b>
<b>Appendix G: Taiwan RoHS Information.....</b>	<b>51</b>


## Overview

---

### 1.1 Scope

This guide is intended for properly trained service personnel and technicians who need to install Arista Networks Data Center Switches.

DCS-7050QX-32S	DCS-7050TX-48	DCS-7050QX2-32S
DCS-7050TX-64	DCS-7050SX-64	DCS-7050TX-72
DCS-7050SX-72	DCS-7050TX-72Q	DCS-7050SX-72Q
DCS-7050TX-96	DCS-7050SX2-72Q	DCS-7050SX-96
DCS-7050CX3-32S	DCS-7050SX3-48YC12	DCS-7050SX3-48YC8
DCS-7050CX3M-32S	DCS-7050TX3-48C8	DCS-7050SX3-48C8

 **Important:** Only qualified personnel should install, service, or replace this equipment.  
Seul le personnel qualifié doit installer, service, ou remplacer cet équipement.

### 1.2 Receiving and Inspecting the Equipment

Upon receiving the switch, inspect the shipping boxes and record any external damage. Retain packing materials if you suspect that part of the shipment is damaged; the carrier may need to inspect them.


If the boxes were not damaged in transit, unpack them carefully. Ensure that you do not discard any accessories that may be packaged in the same box as the main unit.

Inspect the packing list and confirm that you received all listed items. Compare the packing list with your purchase order. [Parts List](#) provides a list of components included with the switch.

### 1.3 Installation Process

The following tasks are required to install and use the switch.

1. Select and prepare the installation site ([Site Selection](#)).
2. Assemble the installation tools listed ([Tools and Parts Required for Installation](#)).
3. Attach the mounting brackets and install the switch in an equipment rack ([Rack Mounting the Switch](#)).
4. Connect the switch to the power source and network devices ([Cabling the Switch](#)).
5. Configure the switch ([Configuring the Switch](#)).

 **Important:** Class 1 Laser Product: This product has provisions to install Class 1 laser transceivers which provide optical coupling to the communication network. Once a Class 1 laser product is installed, the equipment is a Class 1 Laser Product (Appareil à Laser de Classe 1). The customer is responsible for selecting and installing the Class 1 laser transceiver and for insuring that the Class 1 AEL (Allowable Emission Limit) per EN/IEC

---

60825, CSA E60825-1, and Code of Federal Regulations 21 CFR 1040 is not exceeded after the laser transceiver have been installed. Do not install laser products whose class rating is greater than 1. Refer to all safety instructions that accompanied the transceiver prior to installation. Only Class 1 laser devices, certified for use in the country of installation by the cognizant agency are to be utilized in this product.

Produit Laser de classe 1: Ce produit a des dispositions pour installer des émetteurs-récepteurs de laser de classe 1 qui offre de couplage au réseau de communication optique. Une fois un produit laser de classe 1 est installé, l'équipement est un produit Laser de classe 1 (Appareil à Laser de Classe 1). Le client est responsable pour sélectionner et installer l'émetteur/récepteur de laser de classe 1 et pour assurer que la classe 1 AEL (limite d'émission admissible) par EN/IEC 6-825, CSA E60825-1, et Code des règlements fédéraux 21 CFR 1040 ne soit pas dépassée après avoir installé l'émetteur/récepteur de laser. Ne pas installer des appareils à laser dont la cote de classe est supérieure à 1. Voir toutes les consignes de sécurité qui ont accompagné l'émetteur-récepteur avant l'installation. Seuls appareils laser de classe 1 certifiés pour une utilisation dans le pays d'installation par l'organisme compétent doivent être utilisées dans ce produit.



**Important:** Ultimate disposal of this product should be handled in accordance with all national laws and regulations.

Aucune pièce réparable par l'utilisateur à l'intérieur. Confiez toute réparation à un technicien qualifié.

## 1.4 Safety Information

Refer to the Arista Networks document Safety Information and Translated Safety Warnings available at: <http://www.arista.com/assets/data/pdf/AristaBSMIRoHS.pdf>.

## 1.5 Obtaining Technical Assistance

Any customer, partner, reseller or distributor holding a valid Arista Service Contract can obtain technical support in any of the following ways.

- **Email:** [support@arista.com](mailto:support@arista.com). This is the easiest way to create a new service request.

Include a detailed description of the problem and the output of “show tech-support”.

- **Web:** <http://www.arista.com/en/support>

A support case may be created through the support portal on our website. You may also download the most current software and documentation, as well as view FAQs, Knowledge Base articles, Security Advisories, and Field Notices.

- **Phone:** +1 866-476-0000 or +1 408-547-5502



**Important:** No user serviceable parts inside. Refer all servicing to qualified service personnel.

Aucune pièce réparable par l'utilisateur à l'intérieur. Confiez toute réparation à un technicien qualifié.

## 1.6 Specifications

List of specifications of Arista Data Center modular switches and components covered by this guide.

**Table 1: Switch Specifications (Dimensions and Weights)**

Switch	Size (W x H x D)	Weight
--------	------------------	--------

DCS-7050QX-32S	48.3 x 4.4 x 40.6 cm (19 x 1.75 x 16 inches)	9.1 kg (20.1 lbs.)
DCS-7050TX-48	48.3 x 4.4 x 40.6 cm (19 x 1.75 x 16 inches)	7.7 kg (17.0 lbs.)
DCS-7050QX2-32S	48.3 x 4.4 x 40.6 cm (19 x 1.75 x 16 inches)	9.1 kg (20.1 lbs.)
DCS-7050TX-64	48.3 x 4.4 x 40.6 cm (19 x 1.75 x 16 inches)	8.6 kg (19.0 lbs.)
DCS-7050SX-64	48.3 x 4.4 x 40.6 cm (19 x 1.75 x 16 inches)	8.6 kg (19.0 lbs.)
DCS-7050TX-72	48.3 x 4.4 x 40.6 cm (19 x 1.75 x 20.6 inches)	10.0 kg (22.0 lbs.)
DCS-7050SX-72	48.3 x 4.4 x 40.6 cm (19 x 1.75 x 16 inches)	8.6 kg (19.0 lbs.)
DCS-7050TX-72Q	48.3 x 4.4 x 40.6 cm (19 x 1.75 x 20.6 inches)	10.2 kg (22.5 lbs.)
DCS-7050SX-72Q	48.3 x 4.4 x 40.6 cm (19 x 1.75 x 16 inches)	7.8 kg (17.2 lbs.)
DCS-7050TX-96	48.3 x 4.4 x 40.6 cm (19 x 1.75 x 20.6 inches)	10.5 kg (23.1 lbs.)
DCS-7050SX2-72Q	48.3 x 4.4 x 40.6 cm (19 x 1.75 x 16 inches)	10.1 kg (22.3 lbs.)
DCS-7050SX-96	48.3 x 4.4 x 40.6 cm (19 x 1.75 x 16 inches)	9.1 kg (20.1 lbs.)
DCS-7050CX3-32S	48.3 x 4.4 x 40.6 cm (19 x 1.75 x 16 inches)	8.8 kg (19.4 lbs.)
DCS-7050SX3-48YC12	48.3 x 4.4 x 44.4 cm (19 x 1.75 x 17.5 inches)	9.2 kg (20.3 lbs.)
DCS-7050SX3-48YC8	48.3 x 4.4 x 46.8 cm (19 x 1.75 x 18.43 inches) <sup>(1)</sup>	9.5 kg (21.0 lbs.)
DCS-7050CX3M-32S	48.3 x 4.4 x 55.9 cm (19 x 1.75 x 22.0 inches)	12.0 kg (26.5 lbs.)
DCS-7050TX3-48C8	48.3 x 4.4 x 46.7 cm (19 x 1.75 x 18.4 inches)	9.4 kg (20.6 lbs.)
DCS-7050SX3-48C8	48.3 x 4.4 x 46.8 cm (19 x 1.75 x 18.4 inches) <sup>(1)</sup>	9.4 kg (20.6 lbs.)

(1): Depth 50.5 cm (19.9 inches) with PSU and fans.

**Table 2: Switch Specifications (Operational and Storage)**

Switch	Operating Temperature	Storage Temperature	Operating Altitude	Relative Humidity
All	0° to 40°C (32° to 104°F)	-25° to 70°C (-13° to 158°F)	0 to 3,000 meters (0 to 10,000 feet)	5 to 90% (non-condensing)

**Table 3: Switch Specifications (Power Input)**

Power Source	PSU Models	Ratings
Power Input (AC Power)	PWR-500AC	100 - 240 VAC, 6.5 to 3.0 A, 50/60 Hz
Power Input (DC Power)	PWR-500-DC	-48 to -60 VDC, 15 A
Power Input (AC Power)	PWR-511-AC	100 - 127 / 200 - 240 VAC, 7.1 / 3.4 A, 50/60 Hz
Power Input (DC Power)	PWR-511-DC	-48 to -60 VDC, 13 A

Power Input (AC Power)	PWR-1011-AC-RED	100 - 120 / 200 - 240 VAC, 12 / 6 A, 50/60 Hz
Power Input (DC Power)	PWR-1011-DC-RED	-48 to -60 VDC, 30 A



**Note:** All PSU models are not supported by all switches. Some switches described in this guide could use power supplies that may no longer be available. Contact your local Arista representative for more information.

**Table 4: Switch Specifications (Power Draw)**

Switch	Power Draw (Typical / Maximum)	Supported Power Supply
DCS-7050QX-32S	150 W / 300 W	PWR-500AC, PWR-500-DC
DCS-7050TX-48	305 W / 367 W	PWR-500AC, PWR-500-DC
DCS-7050QX2-32S	129 W / 283 W	PWR-500AC, PWR-500-DC
DCS-7050TX-64	315 W / 387 W	PWR-500AC, PWR-500-DC
DCS-7050SX-64	140 W / 220 W	PWR-500AC, PWR-500-DC
DCS-7050TX-72	349 W / 440 W	PWR-500AC, PWR-500-DC
DCS-7050SX-72	144 W / 276 W	PWR-500AC, PWR-500-DC
DCS-7050TX-72Q	340 W / 430 W	PWR-500AC, PWR-500-DC
DCS-7050SX-72Q	144 W / 261 W	PWR-500AC, PWR-500-DC
DCS-7050TX-96	355 W / 455 W	PWR-500AC, PWR-500-DC
DCS-7050SX2-72Q	127 W / 251 W	PWR-500AC, PWR-500-DC
DCS-7050SX-96	159 W / 290 W	PWR-500AC, PWR-500-DC
DCS-7050CX3-32S	206 W / 314 W	PWR-500AC, PWR-500-DC
DCS-7050SX3-48YC12	170 W / 325 W	PWR-500AC, PWR-500-DC
DCS-7050SX3-48YC8	165 W / 345 W	PWR-511-AC, PWR-511-DC
DCS-7050CX3M-32S	398 W / 751 W	PWR-1011-AC-RED, PWR-1011-DC-RED
DCS-7050TX3-48C8	212 W / 346 W	PWR-511-AC, PWR-511-DC
DCS-7050SX3-48C8	133 W / 313 W	PWR-511-AC, PWR-511-DC



## Preparation

---

### 2.1 Site Selection

Describes the location specifications.

The following criteria should be considered when selecting a site to install the switch:

- **Temperature and Ventilation:** For proper ventilation, install the switch where there is ample airflow to the front and back of the switch. The ambient temperature should not go below 0° or exceed 40°C.
  - ! **Important:** To prevent the switch from overheating, do not operate it in an area where the ambient temperature exceeds 40°C (104°F).

Pour empêcher l'interrupteur de surchauffe, ne pas utiliser il dans une zone où la température ambiante est supérieure à 40°C (104°F).
- **Airflow Orientation:** Determine airflow direction of the four fan modules and two power supply modules on the rear panel. Fan and power supply module handles indicate airflow direction:
  - **Blue Handle:** Air Inlet module.
  - **Red Handle:** Air Exit module.

[Figure 1: Airflow Direction Labels and Handles](#) displays fan and power supply module locations on the rear panel. Their red handles indicate that they are air exit modules. Verify that each module has the same airflow direction. Base the switch orientation on the airflow direction of the modules to assure the air inlet is always oriented toward the cool aisle:

- **Air Exit modules:** orient the rear panel toward the hot aisle.
- **Air Inlet modules:** orient the rear panel toward the cool aisle.


If the airflow direction is not compatible with the installation site, contact your sales representative to obtain modules that circulate air in the opposite direction.

- **Rack Space:** Install the switch in a 19" rack or cabinet. The switch height is 1 RU. The accessory kit provides mounting brackets for two-post and four-post racks.

When mounting the switch in a partially filled rack, load the rack from bottom to top, with the heaviest equipment at the bottom. Load the switch at the bottom if it is the only item in the rack.


- **Power Requirements:** Power requirements vary by switch and power supply model. Refer to [Table 3: Switch Specifications \(Power Input\)](#) and [Table 4: Switch Specifications \(Power Draw\)](#) for information regarding your specific system.


Two circuits provide redundancy protection. [Grounding the Switch](#) describes power cable requirements.

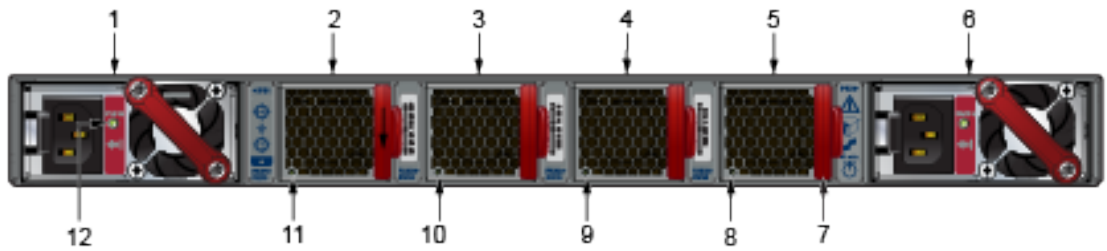

**Figure 1: Airflow Direction Labels and Handles**

1	Power supply module 1 label	5	Fan module 4	9	Fan module 3 status LED
2	Fan module 1	6	Power supply module 2 label	10	Fan module 2 status LED
3	Fan module 2	7	Fan module handle	11	Fan module 1 status LED
4	Fan module 3	8	Fan module 4 status LED	12	PSU 1 status LED


 **Note:** Handle or label color indicates airflow direction.

 **Important:** The power input plug-socket combination must be accessible at all times; it provides the primary method of disconnecting power from the system.

La combinaison de la puissance-prise d'entrée doit être accessible en tout temps ; Il fournit le principal moyen de coupure d'alimentation du système.

- **Other Requirements:** Select a site where liquids or objects cannot fall onto the equipment and foreign objects are not drawn into the ventilation holes. Verify these guidelines are met:

- Clearance areas to the front and rear panels allow for unrestricted cabling.
- All front and rear panel indicators can be easily read.
- Power cords can reach from the power outlet to the connector on the rear panel.

 **Important:** All power connections must be removed to de-energize the unit.

Toutes les connexions d'alimentation doivent être enlevées pour hors tension l'appareil.

## 2.2 Tools and Parts Required for Installation

Each switch provides an accessory kit that contains parts that are required to install the switch.

In addition to the accessory kit, the following tools and equipment are required to install the switch:

### Two-Post Rack

- Screws or rack mounting nuts and bolts.
- Screwdriver

### Four-Post Rack (Tool-less)

No additional equipment required.

### Four-Post Rack (Conventional)

- Screws or rack mounting nuts and bolts.

- Screwdriver

Accessory kit does not include screws for attaching the switch to the equipment rack. When installing the switch into an equipment rack with unthreaded post holes, nuts are also required to secure the switch to the rack posts.

## **2.3 Electrostatic Discharge (ESD) Precautions**

Observe these guidelines to avoid ESD damage when installing or servicing the switch.

- Assemble or disassemble equipment only in a static-free work area.
- Use a conductive work surface (such as an anti-static mat) to dissipate static charge.
- Wear a conductive wrist strap to dissipate static charge accumulation.
- Minimize handling of assemblies and components.
- Keep replacement parts in their original static-free packaging.
- Remove all plastic, foam, vinyl, paper, and other static-generating materials from the work area.
- Use tools that do not create ESD.



## Rack Mounting the Switch

**!** **Important:** The rack mounting procedure is identical for all switches covered by this guide. Illustrations in this chapter depict the mounting of a DCS-7050QX-32S switch.

Les procédure de montage du bâti est identique pour tous les commutateurs visés par ce guide. Illustrations dans ce chapitre montrent le montage d'un interrupteur de DCS-7050QX-32S.

- [Two-Post Rack Mount](#) provides instructions for mounting the switch in a two-post rack.
- [Four-Post Rack Mount](#) provides instructions for mounting the switch in a four-post rack.

After completing the instructions for your rack type, proceed to [Cabling the Switch](#).

### 3.1 Two-Post Rack Mount

Discusses two-post rack mounting options.

To mount the switch onto a two-post rack, assemble the mounting brackets to the chassis, then attach the brackets to the rack posts. Two-post accessory kits include the following two-post mounting parts:


2 three-hole mounting brackets

Each chassis side has attachment pins that align with bracket holes. Pin orientation is symmetric and equidistant, supporting bracket placements where the flange is flush with the front switch panel, flush with the rear panel, or not flush with either panel. Each bracket hole includes a key-opening for placing the bracket flush with the chassis and then locking it into place.

**!** **Important:** Attachment pins must engage all three upper bracket holes.


Goupilles de fixation doivent être bloquer tous les trois trous de la bride supérieure..

[Figure 2: Bracket Mount Examples for Two-Post Rack Mount](#) displays proper bracket mount configuration examples.

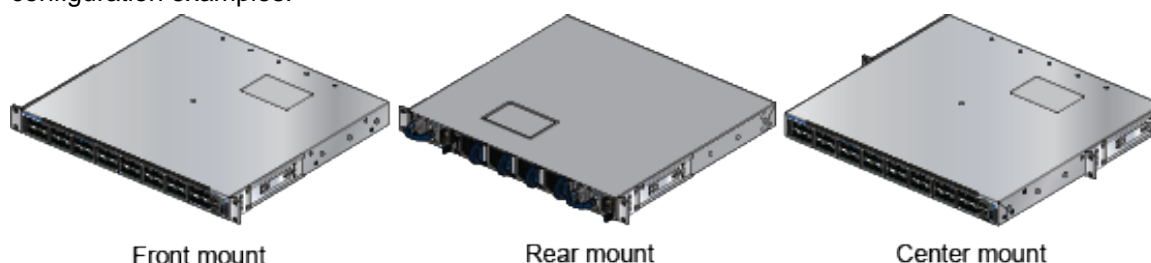

**Figure 2: Bracket Mount Examples for Two-Post Rack Mount**


[Figure 3: Improper Bracket Mount Examples for Two-Post Rack Mount](#) displays improper bracket mount configuration examples.

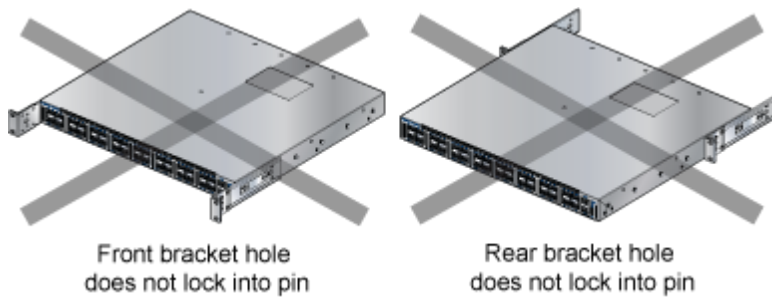

**Figure 3: Improper Bracket Mount Examples for Two-Post Rack Mount**

### 3.1.1 Attaching Mounting Brackets to the Two-Post Chassis

The following image displays the front bracket alignment for mounting the switch into a four-post rack.

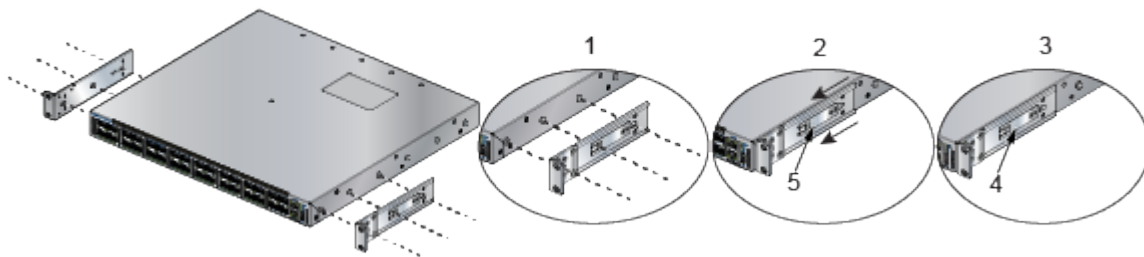

**Figure 4: Attaching the Mounting Brackets to the Switch Chassis**

This procedure attaches mounting brackets to the switch chassis as depicted by [Figure 4: Attaching the Mounting Brackets to the Switch Chassis](#).


1. Align the mounting brackets with the attachment pins to obtain the desired mounting position.
2. Place the bracket flush on the chassis with attachment pins protruding through key-openings.
3. Slide the bracket toward the front flange until the bracket clip locks with an audible click.

To remove the mounting bracket from the chassis, lift the front edge of the mounting bracket clip with a flathead screwdriver and slide the bracket away from the front flange (opposite from the installation direction).

### 3.1.2 Inserting the Switch into the Rack

This procedure attaches the switch to the rack ([Figure 5: Inserting the Switch into the Rack](#)).

1. Lift the chassis into the rack. Position the flanges against the rack posts.
2. Select mounting screws that fit your equipment rack.
3. Attach the bracket flanges to the rack posts.

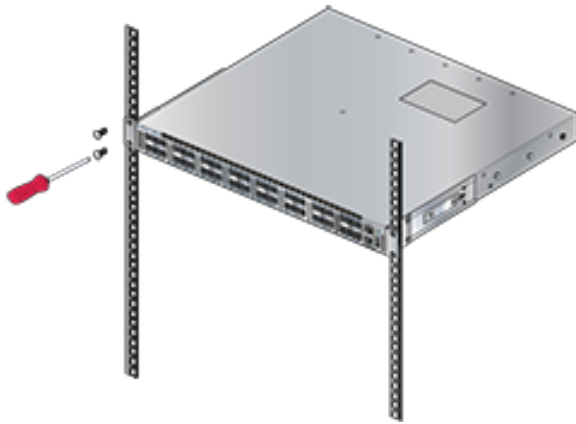

**Figure 5: Inserting the Switch into the Rack**

After completing the two-post rack mount, proceed to [Cabling the Switch](#).

## 3.2 Four-Post Rack Mount

Discusses the four-post racking option.

The switch is mounted onto a four-post rack by assembling two rails onto the rear posts, sliding the switch onto the rails, then securing the switch to the front posts.

The installation kit provides the following four-post mounting parts:

- 2 six-hole mounting brackets
- 2 rail-rods
- 2 rail-slides


The rail-rods and rail-slides assemble into two identical slide-rails.

Each chassis side has attachment pins that align with bracket holes. Pin orientation is symmetric and equidistant, supporting bracket placements where the flange is flush with the front switch panel, flush with the rear panel, or not flush with either panel. Each bracket hole includes a key-opening for placing the bracket flush with the chassis and then locking it into place.


**!** **Important:** Attachment pins must engage at least five of the six bracket holes.

Goupilles de fixation doivent être lock au moins cinq des trous du six support.

[Figure 6: Bracket Mount Examples for Four-Post Rack Mount](#) displays proper bracket mount configuration examples. [Figure 7: Improper Bracket Mount Example for Four-Post Rack Mount](#) displays an improper bracket mount configuration example.

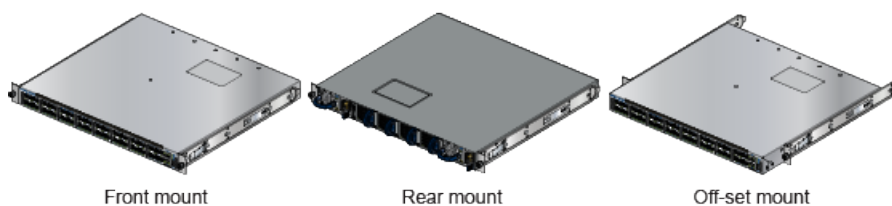

**Figure 6: Bracket Mount Examples for Four-Post Rack Mount**

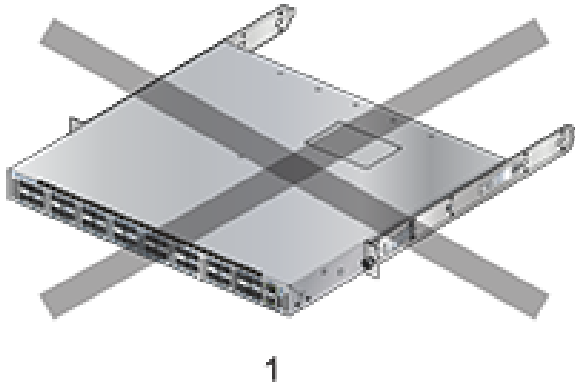


**Figure 7: Improper Bracket Mount Example for Four-Post Rack Mount**

- 1 Bracket not attached by at least 5 pins

### 3.2.1 Attaching Mounting Brackets to the Four-Post Chassis

The following image displays the front bracket alignment for mounting the switch into a four-post rack.

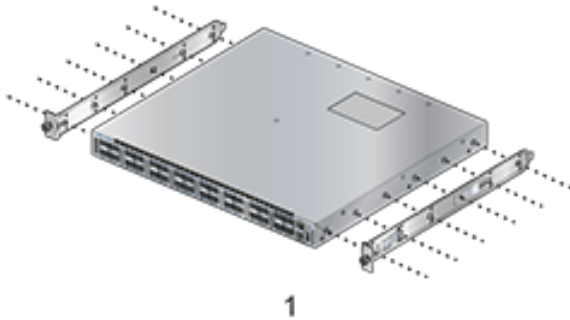

**Figure 8: Attaching the Mounting Brackets to the Switch Chassis**

This procedure attaches mounting brackets to the switch chassis as depicted by [Figure 4: Attaching the Mounting Brackets to the Switch Chassis](#).

1. Align the mounting brackets with the attachment pins to obtain the desired mounting position.
2. Place the bracket flush on the chassis with attachment pins protruding through key-openings.
3. Slide the bracket toward the front flange until the bracket clip locks with an audible click.


To remove the mounting bracket from the chassis, lift the front edge of the mounting bracket clip with a flathead screwdriver and slide the bracket away from the front flange (opposite from the installation direction).

### 3.2.2 Assembling the Rails onto the Equipment Rack

Rail-rods and rail-slides assemble into two identical rails. Each rail connects a front post to a rear post. When the rails are installed, the switch slides on the rails into the rack. Each bracket includes a screw that attaches the switch to the rail.

Each end of an assembled rail contains two rack plugs ([Figure 9: Attaching the Four-Post Mounting Brackets to the Switch Chassis](#)). The rails are installed into a rack by inserting the plugs into rack slots. When installing rails into posts with threaded or rounded holes, remove all plugs located on both sides of the assembled rails, then install the rails with bolts that fit the rack.



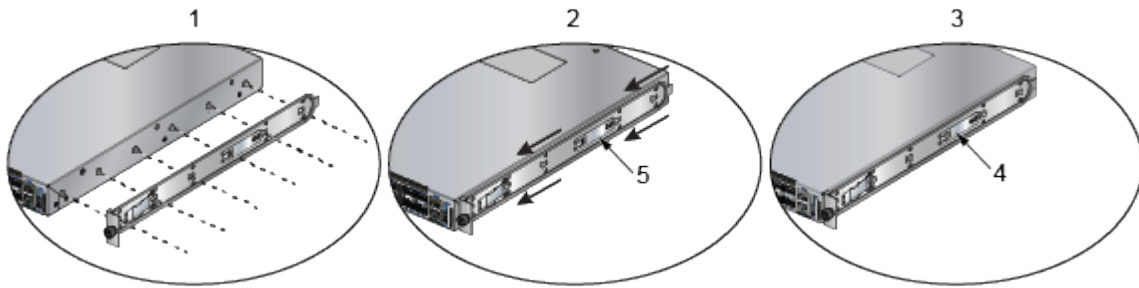


**Figure 9: Attaching the Four-Post Mounting Brackets to the Switch Chassis**

- |   |        |   |                         |
|---|--------|---|-------------------------|
| 1 | Step 1 | 4 | Bracket clip (attached) |
| 2 | Step 2 | 5 | Bracket clip (aligned)  |
| 3 | Step 3 |   |                         |

This procedure attaches the rails to a four post rack:


1. Slide a rail-rod into a rail-slide ([Figure 10: Assembling the Rails](#)) until the rail clip makes an audible click.

The rail clip prevents the extension of the rail beyond the maximum supported distance between the front and rear rack posts.

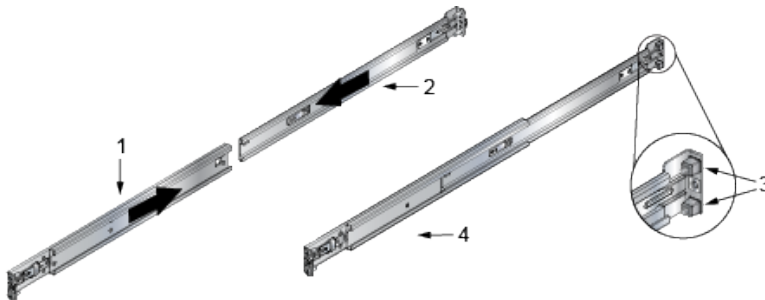

**Figure 10: Assembling the Rails**

- |   |            |   |                  |
|---|------------|---|------------------|
| 1 | Rail-slide | 4 | Rail (assembled) |
| 2 | Rail-rod   |   |                  |
| 3 | Rack plugs |   |                  |
2. Attach rail to the right rear rack post by inserting rod-end rack plugs into post slots ([Attaching the Rails, Detail A](#)). The slide assembly must be inside the right posts, relative to the left rack posts.  
If the rack plugs were previously removed, use bolts to attach the rail to the rack.
  3. Attach the slide end of the rail to the front post by extending the rail end past the post, then contracting the rail while guiding the rack plugs into the post ([Attaching the Rails, Detail B](#)).
  4. Repeat Step 1 through Step 3 for the left posts. Ensure the rails are on the same horizontal level.

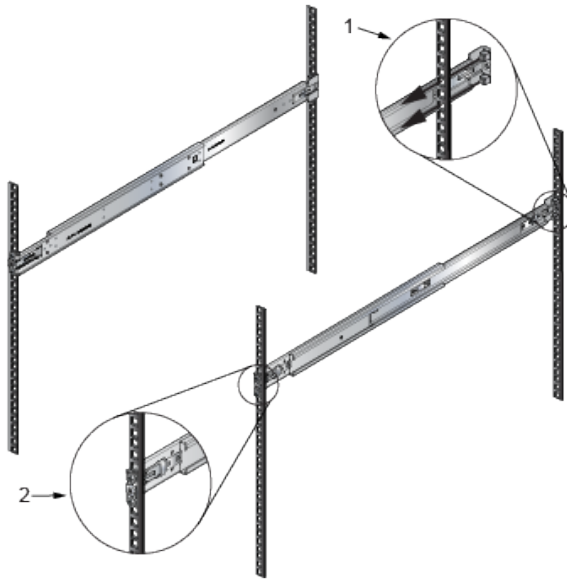


**Figure 11: Attaching the Rails**

- 1 Detail A
- 2 Detail B

### 3.2.3 Attaching the Switch to the Rack

After the rails are installed, the switch slides on the rails into the rack. Each bracket includes a thumb screw that attaches the switch to the rail.

1. Lift the switch into the rack and insert the mounting brackets into the slide rails.

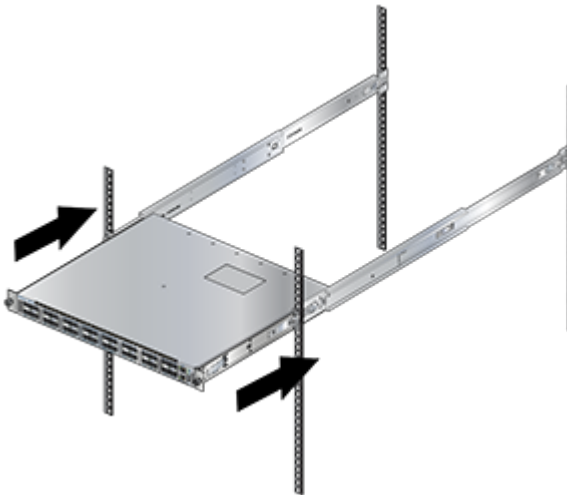

**Figure 12: Inserting the Switch onto the Rails**

2. Slide the switch on the rails, toward the rear posts, until the mounting bracket flanges are flush with the rail flanges attached to the rack posts.
3. Attach the bracket flanges to the rack post using the quick-release thumb screws supplied with the brackets ([Figure 13: Attaching the Switch to the Rack Posts](#)).



**Figure 13: Attaching the Switch to the Rack Posts**

After completing the four-post rack mount, proceed to [Cabling the Switch](#).



## Cabling the Switch

### 4.1 Grounding the Switch

After mounting the switch into the rack, this section discusses how to connect the switch to the data center ground.

[Figure 14: Earth Grounding Pad Sockets for Models without Management Ports on the Rear Panel](#) displays the location of the grounding pads located on the bottom corners of the rear panel for the models that have no management ports on the rear panel. [Figure 15: Earth Grounding Pad Sockets for Models with Management Ports on the Rear Panel](#) displays the location of the grounding pads on the rear panel for models that have management ports on the rear panel. There are threaded holes under the sticker on the right (next to PS2) that warns about “1 min”. [Figure 16: Earth Grounding Adapter for DCS-7050SX3-48YC8](#) displays the location of the grounding assembly on the rear panel for DCS-7050SX3-48YC8.

**!** **Important:** Grounding wires and grounding lugs (M4 x 0.7) are not supplied. Wire size should meet local and national installation requirements. Commercially available 6 AWG wire is recommended for installations in the U.S.

À la terre et de mise à la terre fils cosses (M4 x 0.7) ne sont pas fournis. Calibre des fils doit satisfaire des exigences de l'installation locale et nationale. Disponible dans le commerce 6 fils AWG est recommandé pour les installations aux États-Unis.




**Figure 14: Earth Grounding Pad Sockets for Models without Management Ports on the Rear Panel**

1 Earth grounding pad



**Figure 15: Earth Grounding Pad Sockets for Models with Management Ports on the Rear Panel**

1 Earth grounding pad

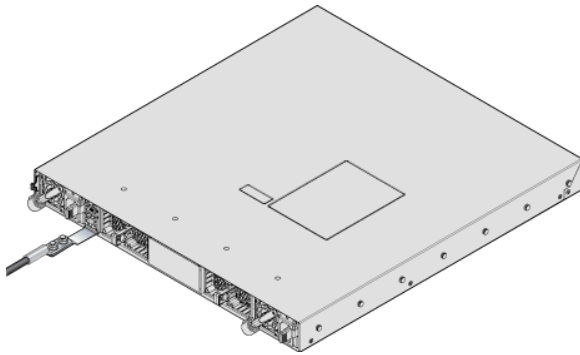


**Figure 16: Earth Grounding Adapter for DCS-7050SX3-48YC8**

## 4.2 Grounding Adapter Assembly (DCS-7050SX3-48YC8)


Use the following steps to assemble and attach a grounding assembly to the chassis before mounting it into the rack.

[Figure 17: Earth Grounding Adapter Assembly for DCS-7050SX3-48YC8](#) shows the exploded and assembled views.

 **Note:** The chassis is shown upside down in the following figure.

**Figure 17: Earth Grounding Adapter Assembly for DCS-7050SX3-48YC8**


1. Identify all the components to be assembled:

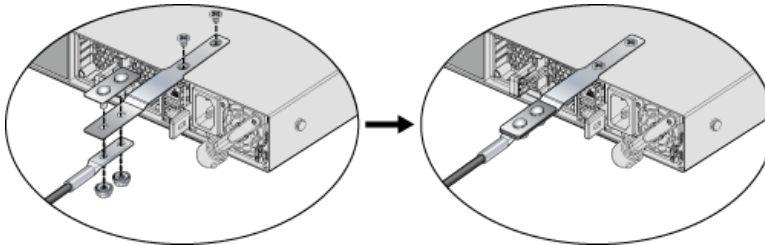

- 1x Grounding adapter
  - 1x Grounding bracket
    - 2x Flat-head screws (Phillips, M4 x 5.00 long, stainless steel)
    - 2x Hex nuts (#10-32, Serrated Flange, stainless steel)
    - 1x Grounding lug (Copper, 2-hole, 6 AWG, straight barrel)
2. Insert the grounding adapter through the holes in the grounding bracket.
  3. Insert the ground lug on to the grounding adapter studs and fasten using the hex nuts to form the grounding assembly.
  4. With the chassis on its top on a flat surface, attach the grounding assembly to the chassis using the flat head screws.
  5. Turn the chassis over before mounting it into a rack and connecting cables.

## 4.3 Connecting Power Cables

This section discusses the correct procedure for connecting the power cables to the device.

 **Important:** Installation of this equipment must comply with local and national electrical codes. If necessary, consult with the appropriate regulatory agencies and inspection authorities to ensure compliance.

Installation de cet équipement doit être conformes aux codes électriques locaux et nationaux. Si nécessaire, consulter les organismes de réglementation appropriés et des autorités de contrôle pour assurer la conformité.

The switch operates with two installed power supplies. At least one power supply must connect to a power source. Two circuits provide redundancy protection. [Rear Panel](#) displays the location of the power supplies on the rear panel of the switch.

**!** **Important:** Read all installation instructions before connecting the system to the power source. Lire toutes les instructions d'installation avant de brancher le système à la source d'alimentation.

- **Non-Redundant Configuration:** Connect power to either of the two power supplies.
- **Redundant Power Supply Configuration:** Connect power to both power supplies.
- **Power down the Switch:** Remove all power cords and wires from the power supplies.

**!** **Important:** This equipment must be grounded. Never defeat the ground conductor. Cet équipement doit être mis à la terre. Ne jamais modifier le conducteur de terre.

**!** **Important:** This unit requires overcurrent protection. Cet appareil requiert une protection contre les surintensités.


### 4.3.1 AC Power Supplies

The following AC power supplies are supported.

- PWR-500AC
  - PWR-511-AC
  - PWR-1011-AC-RED

**Note:** Handle color indicates airflow direction for all PSUs.


[Figure 18: PWR-500AC AC Power Supply](#) displays PWR-500AC AC power supply, including the power socket on the left side of the module. The AC power supply connects to a circuit that provides the required power, as specified by [Table 4: Switch Specifications \(Power Draw\)](#).

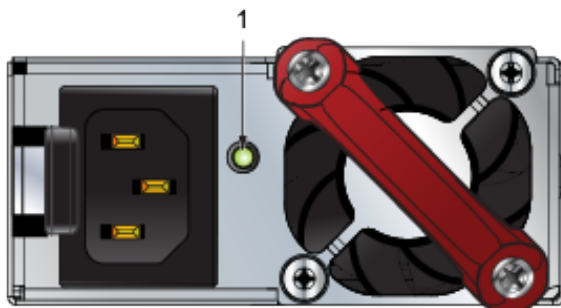

**Figure 18: PWR-500AC AC Power Supply**

- 1 Power supply status LED

[Figure 19: PWR-1011-AC-RED AC Power Supply](#) displays PWR-1011-AC-RED AC power supply, including the power socket on the right side of the module. The AC power supply connects to a circuit that provides the required power, as specified by [Table 4: Switch Specifications \(Power Draw\)](#).

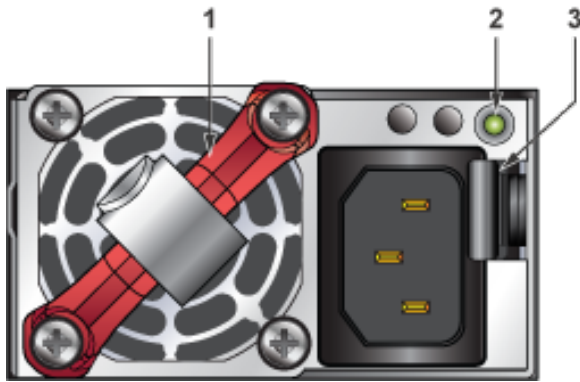

**Figure 19: PWR-1011-AC-RED AC Power Supply**

- 1 Handle
- 2 Power supply status LED
- 3 Release


The power supplies require power cables that comply with IEC-320. The accessory kit provides two IEC-320 compliant power cables with appropriate connectors for the PSUs.

### 4.3.2 DC Power Supplies

The following DC power supplies are supported. [Figure 20: PWR-500-DC DC Power Supplies](#) displays PWR-500-DC DC power supply

- PWR-500-DC
  - PWR-511-DC
  - PWR-1011-DC-RED

 **Note:** Handle color indicates airflow direction for all PSUs.

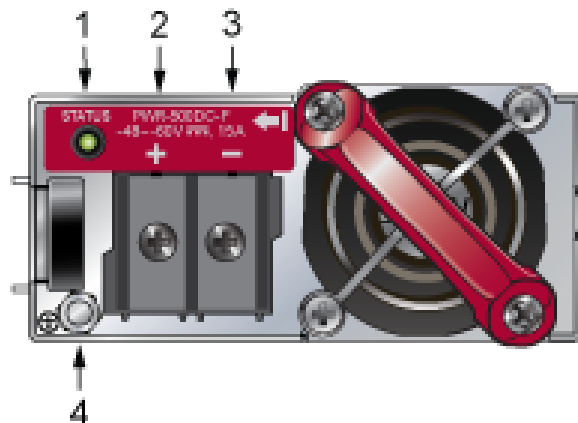


- |                           |                    |
|---------------------------|--------------------|
| 1 Power supply status LED | 3 Battery Return   |
| 2 -48V                    | 4 Protective Earth |

**Figure 20: PWR-500-DC DC Power Supplies**

[Figure 21: PWR-1011-DC DC Power Supplies](#) displays PWR-1011-DC DC power supply.



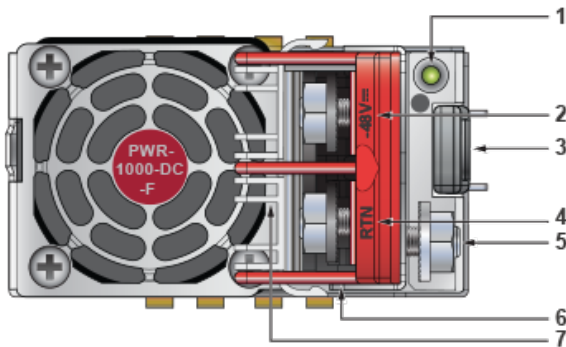

**Figure 21: PWR-1011-DC DC Power Supplies**

1	Power supply status LED	4	Battery Return	7	Terminal cover
2	-48V	5	Protective Earth		
3	Release	6	Handle		

**Important:** A disconnect device must be provided as part of the installation.

Un dispositif de sectionnement doit être fourni dans le cadre de l'installation.

**Important:** Ensure power is removed from DC circuits before performing any installation actions. Locate the disconnect device, circuit breakers or fuses on DC power lines servicing the circuits. Turn off the power line circuits or remove the fuses.

Pouvoir assurer qu'il est retiré de circuits DC avant d'effectuer des actions d'installation . Localiser les disjoncteurs ou des fusibles sur les lignes de courant continu desservant les circuits. Coupez les circuits de lignes d'alimentation ou retirer les fusibles.

**Important:** Wire size must comply with local and national requirements and electrical codes. Use only copper wire.

Le calibre du fil doit être conforme aux exigences locales et nationales et les codes électriques. Utiliser du fil de cuivre.

**Important:** Apply ground connection to the switch first during installation and remove last when removing power.

Appliquer connexion à la terre à l'interrupteur premier lors de l'installation et de supprimer la dernière alimentation lors du débranchement.

### 4.3.3 Connecting the DC Power Supply

#### 4.3.3.1 Wire and Lug Preparation

Before performing any installation actions, ensure power is removed from DC circuits by turning off the power line servicing the circuits. Prepare the stranded wiring before you begin a DC power installation.

**Note:** Stranded copper wiring is required and should meet local and national installation requirements. Wires and grounding lugs are not supplied.

1. Attach an ESD grounding strap.
2. Prepare the stranded copper wiring for the power supply to be used.
3. [Table 4-1](#) provides wiring, lug, and tightening torque information for the power supplies covered in this guide.

**Table 5: Wiring, Lug, and Tightening Torques for DC PSUs**


PSU	Wire Size <sup>(1)</sup>		Lug Type <sup>(2)</sup>	Tightening Torque	
	(AWG)	(mm <sup>2</sup> )		N • m	in. • lbs.
PWR-500-DC	14 or larger	2.0 or larger	ring or spade/ fork	1.0	9.0
PWR-511-DC	10 - 12	6.0 - 4.0	ring	1.0	9.0
PWR-1011-DC	6 - 8	16.0 - 10.0		2.7	24

1. Unless otherwise noted, wire size applies to -48V, Battery return, and Protective earth wires. 2. Unless otherwise noted, twin #10 studs spaced for dual-hole lug with 5/8" hole spacing.

4. Strip the wires to the appropriate length for the lugs to be used.
5. Use agency-approved compression (pressure) lugs for wiring terminations.
6. Slip on heat-shrink tubing on the wire ends before assembling the lugs on to the wire.
7. Crimp the lugs with the proper tool, and ensure that the tubing extends over the barrel of the lugs and the insulation on the wires.
8. Shrink the tubing with a heat gun.

#### 4.3.3.2 Connecting a DC Power Supply to Power Source


To connect a DC power supply to power source:

 **Important:** Ensure power is removed from DC circuits before performing any installation actions. Locate circuit breakers or fuses on DC power lines servicing the circuits. Turn off the power line circuits or remove the fuses.

Assurez-vous de pouvoir retirer des circuits en courant continu avant d'effectuer toute action d'installation. Localiser les disjoncteurs ou fusibles sur les lignes électriques DC entretien des circuits. Mettez hors tension le circuit ligne ou retirer les fusibles.

 **Important:** Wire size must comply with local and national requirements and electrical codes. Use only copper wire.

Calibre doit respecter les exigences locales et nationales et les codes de l'électricité. Utiliser seulement du fil de cuivre.

 **Important:** Apply the ground connection first during installation and remove last when removing power.

Appliquer le motif connexion tout d'abord pendant l'installation et supprimer dernière lors du retrait de puissance.

1. Prepare the stranded wiring ([Wire and Lug Preparation](#)).
2. Attach the appropriate lugs to the source DC wires.
3. Connect the DC-input wires to the appropriate terminals using the specified torque ([Wire and Lug Preparation](#)) in the following order.



**Note:** Remove terminal covers as needed.

- a. Ground wire to the Protective Earth (PE) terminal.
  - b. Negative source DC cable to the negative (- / -48V) terminal.
  - c. Positive (+) source DC cable to the positive (+ / Rtn) terminal.
4. Replace the terminal covers as required.

## 4.4 Connecting Serial and Management Cables

This section discusses the serial and management cables requirements and connections.

The accessory kit includes the following cables:


- RJ-45 to DB-9 serial adapter cable.
- RJ-45 Ethernet cable.

Either the front panel or the rear panel has the console, management, and USB ports. [Front Panel](#) and [Rear Panel](#) display the front and rear panels of all switches covered by this guide.


[Table 6: RJ-45 to DB-9 Connections](#) lists the pin connections of the RJ-45 to DB-9 adapter cable.

**Table 6: RJ-45 to DB-9 Connections**

RJ-45		DB-9			RJ-45		DB-9	
RTS	1	8	CTS		GND	5	5	GND
DTR	2	6	DSR		RXD	6	3	TXD
TXD	3	2	RXD		DSR	7	4	DTR
GND	4	5	GND		CTS	8	7	RTS

 **Note:** RJ-45 to DB-9 connections: For models with a console management port on the rear panel, RJ-45 pin 1 (RTS) is connected to RJ-45 pin 8 (CTS); RJ-45 pin 2 (DTR) and RJ-45 pin 7 (DSR) are not electrically connected to any signal.


[Figure 22: Console, Management, and USB Ports](#) displays the console, management, and USB ports in a representative configuration. Some earlier devices have ports where the USB port is located slightly differently.

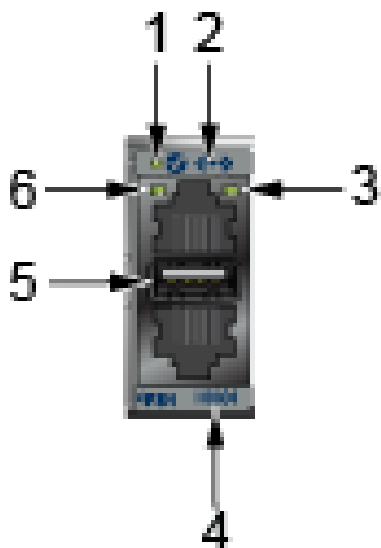

**Figure 22: Console, Management, and USB Ports**

1	System status LED	3	Activity status LED	5	USB port
2	Ethernet management port	4	Serial console port	6	Link status LED

Connect the front or rear panel ports as follows:

- **Console (Serial) Port:** Connect to a PC with the RJ-45 to DB-9 serial adapter cable. The switch uses the following default settings:
    - 9600 baud
    - No flow control
    - 1 stop bit
    - No parity bits
    - 8 data bits
  - **Ethernet Management Port:** Connect to 10/100/1000 management network with RJ-45 Ethernet cable.
  - **USB Port:** The USB port may be used for software or configuration updates.
-  **CAUTION:** Excessive bending can damage interface cables, especially optical cables.  
Flexion excessive peut endommager les câbles d'interface, notamment des câbles optiques.

## Configuring the Switch

---

Arista switches ship from the factory in Zero Touch Provisioning (ZTP) mode. ZTP configures the switch without user intervention by downloading a startup configuration file or a boot script from a location specified by a DHCP server.

To manually configure a switch, ZTP is bypassed. The initial configuration provides one username (**admin**) accessible only through the console port because it has no password.

When bypassing ZTP, initial switch access requires logging in as **admin**, with no password, through the console port. Then you can configure an admin password and other password protected usernames.

This manual configuration procedure cancels ZTP mode, logs into the switch, assigns a password to **admin**, assigns an IP address to the management port, and defines a default route to a network gateway.

1. Provide power to the switch ([Connecting Power Cables](#)).
2. Connect the console port to a PC ([Connecting Serial and Management Cables](#)).

As the switch boots without a **startup-config** file, it displays the following through the console:

```
The device is in Zero Touch Provisioning mode and is attempting to
download the startup-config from a remote system. The device will not
be fully functional until either a valid startup-config is downloaded
from a remote system or Zero Touch Provisioning is cancelled. To cancel
Zero Touch Provisioning, login as admin and type 'zerotouch cancel'
at the CLI.
localhost login:
```

3. Log into the switch by typing **admin** at the login prompt.

```
localhost login:admin
```

4. Cancel ZTP mode by typing **zerotouch cancel**. **IMPORTANT:** This step initiates a switch reboot.

```
localhost>zerotouch cancel
```

5. After the switch boots, log into the switch again by typing **admin** at the login prompt.

```
Arista EOS
localhost login:admin
Last login: Fri Mar 15 13:17:13 on console
```

6. Enter global configuration mode.

```
localhost>enable
localhost#config
```

7. Assign a password to the **admin** username with the **username secret** command.

```
localhost(config)#username admin secret pxq123
```

8. Configure a default route to the network gateway.

```
localhost(config)#ip route 0.0.0.0/0 192.0.2.1
```

9. Assign an IP address (**192.0.2.8/24** in this example) to an Ethernet management port.

```
localhost(config)#interface management 1
localhost(config-if-Ma1/1)#ip address 192.0.2.8/24
```

10. Save the configuration by typing **write memory** or **copy running-config startup-config**.

```
localhost#copy running-config startup-config
```

When the management port IP address is configured, use this command to access the switch from a host, using the address configured in Step 9:

```
ssh admin@192.0.2.8
```

Refer to the **Arista Networks User Manual** for complete switch configuration information.

## Status Indicators

---

This section discusses the several status indicators, their location, and the meaning of their display status.

### A.1 Front Indicators

Front panel LEDs are located on the right side of the chassis and display system, fan, and power supply status.


#### A.1.1 Switch Indicators

The front panel LEDs are labeled either as in [Figure 23: System Status Indicators](#) or as in [Figure 24: System Status Indicators](#). Check your device for the specific method utilized.



**Figure 23: System Status Indicators**

- |                     |                             |
|---------------------|-----------------------------|
| 1 System status LED | 3 Power supply 1 status LED |
| 2 Fan status LED    | 4 Power supply 2 status LED |

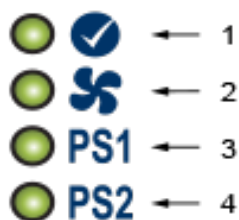

**Figure 24: System Status Indicators**

- |                     |                             |
|---------------------|-----------------------------|
| 1 System status LED | 3 Power supply 1 status LED |
| 2 Fan status LED    | 4 Power supply 2 status LED |

**Table 7: Switch Indicators LED States (Front)**


LED Name	LED State	Device Status
System Status LED	Blinking Green <sup>1</sup>	System is powering up.
	Green	Normal operations. Due to power supply and fan redundancy, this LED will remain green if a single fan or power supply is missing or in a failed state.
	Blue / Blinking Blue	The locator function is active.
	Amber / Yellow / Orange	Two or more fans (any combination of fan modules or PSU fans) are disconnected or malfunctioning or incompatible. The switch will automatically execute a “graceful shutdown” shortly.
Fan Status LED	Green	All fan and power modules are operating normally.
	Amber / Yellow / Orange	Single fan module is removed or malfunctioning. It is also amber when a PSU is completely removed or has a stuck fan rotor.
	Red	Two or more fans (any combination of fan modules or PSU fans) are disconnected or malfunctioning. The switch will automatically execute a “graceful shutdown” shortly.
PSU [1:2] Status LED	Green	PSU is functioning and fully operational. AC is present, Aux output is ON, and Main output is ON.
	Red	PSU has been removed or is not operating properly due to AC cord being unplugged, its fan rotor being stuck, or an internal fault.

1. System could take up to ten minutes to boot up and be ready for operation. Other LEDs could be off.

## A.1.2 Port Indicators

Port LEDs, located in the vicinity of their corresponding ports, provide link and operational status.

[Figure 25: Port LEDs](#) displays the Port LED location on the DCS-7050QX-32S switch.

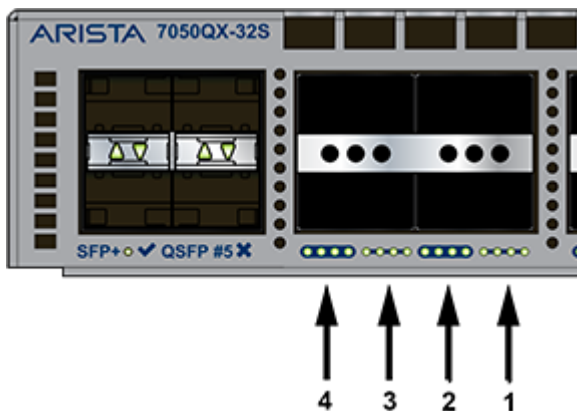

**Figure 25: Port LEDs**

1 Port 4 LED

3 Port 2 LEDs



2 Port 3 LEDs

4 Port 1 LEDs

[Table 8: Port LED States \(Front\)](#) provides status conditions that correspond to port LED states. Port LED behavior for QSFP+ and SFP+ ports is consistent.


**Table 8: Port LED States (Front)**

LED State	Status
Off	Port link is down.
Green	Port link is up.
Yellow / Orange / Amber	Port is software disabled.
Flashing Yellow	Software controlled.

## A.2 Rear Status Indicators

Fan and power supply modules are accessed from the rear panel. Each fan and power supply module contains an LED that reports the module status.

Fan module status LEDs are on the fan modules, as displayed in [Figure 26: Fan Status LED](#).

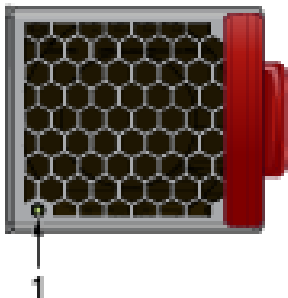

**Figure 26: Fan Status LED**

- 1 Fan module status LED




**Note:** Handle or bezel color indicates airflow direction.

[Table 9: Fan Status LED States \(Rear\)](#) provides status conditions that correspond to fan status LED states.

**Table 9: Fan Status LED States (Rear)**

LED State	Status
Off	The fan module is not detected. If it is inserted, it may not be seated properly.
Green	The fan is operating normally. This LED state is exclusive to its fan module, and independent of the states of its neighboring fans and power supplies.
Red	The fan has failed.

The AC Power Supply Status LEDs are on the power supply modules, as displayed for a representative PSU, in [Figure 27: AC Power Supply Status LED](#).

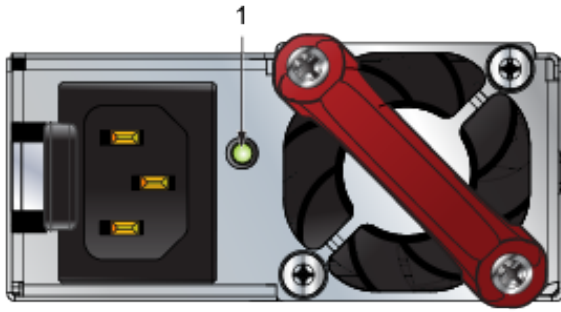

**Figure 27: AC Power Supply Status LED**


- 1 Power supply status LED

[Table 10: AC Power Supply Status LED States \(Rear\)](#) provides status conditions that correspond to the AC power supply status LED states.

**Table 10: AC Power Supply Status LED States (Rear)**

Power Supply State	PWR-500AC-F PWR-500AC-R	PWR-511-AC-RED PWR-511-AC-Blue
Input power present Normal operation	Green	Green
Input power present Power Supply fault	Yellow / Amber / Orange	Yellow
No Input power Supply installed in chassis	Off	Off
Input power present Supply not installed in chassis	Green	Green

The DC Power Supply Status LEDs are on the power supply modules, as displayed for a representative PSU, in [Figure 28: DC Power Supply Status LED](#).

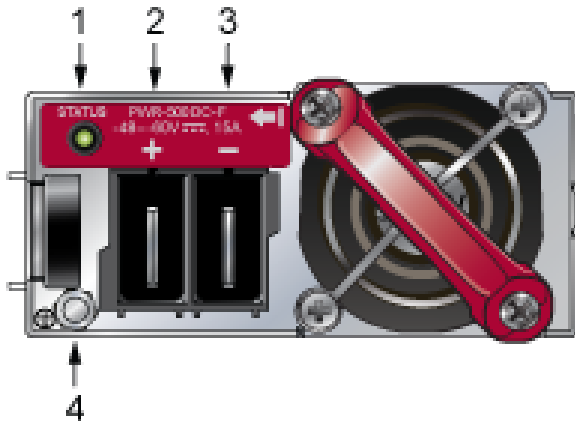

**Figure 28: DC Power Supply Status LED**

1	Power supply status LED	3	Battery Return
2	-48V	4	Protective Earth

[Table 11: DC Power Supply Status LED States \(Rear\)](#) provides status conditions that correspond to the DC power supply status LED states.

**Table 11: DC Power Supply Status LED States (Rear)**

<b>Power Supply State</b>	<b>PWR-500-DC-F PWR-500-DC-R</b>	<b>PWR-511-DC-RED PWR-511-DC-Blue</b>
Input power present Normal operation	Green	Green
Input power present Power Supply fault	Blinking Yellow	Blinking Yellow
No Input power Supply installed in chassis	Off	Off
Input power present Supply not installed in chassis	Blinking Yellow	Blinking Yellow



**Note:** You can narrow down the error condition by logging in to the switch to view the specific device state. Refer to the Arista User Manual's Switch Environment Control chapter, under the topic Viewing Environment Status, for further information on the **show environment** commands.



## Parts List

---

Each switch provides an accessory kit that contains parts that are required to install the switch. This section lists the installation parts contained in the switch accessory kit.

### B.1 Rack Mount Parts

This section discusses the parts and accessories required for the two-post and four-post installation methods.

#### B.1.1 Two-Post Rack Mount Parts

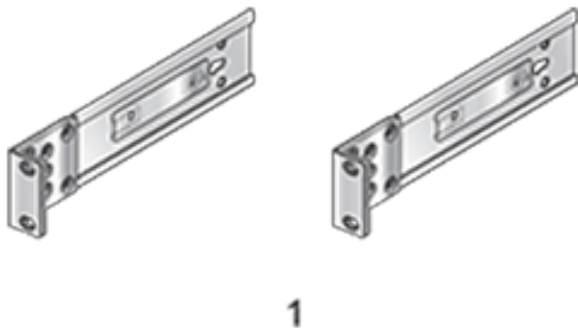


Figure 29: Two-Post Rack Mount Parts

- 1 Two-post rack mount parts

#### B.1.2 Four-Post Rack Mount Parts

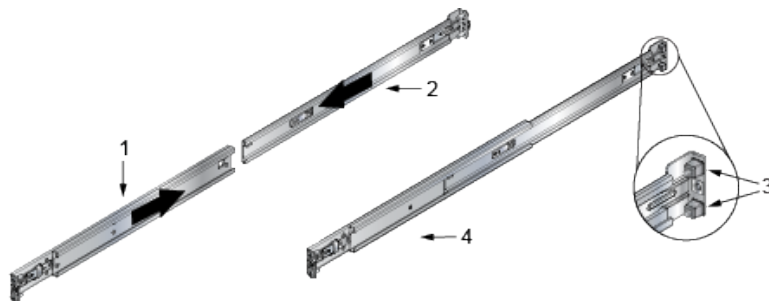



Figure 30: Four-Post Rack Mount Parts

- 1 Rail-slide
- 2 Rail-rod
- 3 Rack plugs (detail)
- 4 Rail (assembled)

## B.2 Cables

This section describes the cables required to install the device.

Quantity	Description
2	Power cables: IEC-320/C13-C14, 13 A, 250 V
1	RJ-45 Patch Panel Cable
1	RJ-45 to DB9 Adapter Cable

 **Warning:** All provided power cables are for use only with Arista products.

警告

すべての電源コードは提供する製品で使用するためだけを目的としている。

電源コードの他の製品での使用の禁止

Aristaが提供するすべての電源コードは、Aristaの製品でのみ使用してください。

## B.3 Ground Extender Kit (Optional)

This section describes the optional ground extender kit for NEBS compliance.

SKU	Description
KIT-GND-EXT-1RU <sup>1</sup>	Ground extender kit for NEBS compliance

1. Available only for certain devices.

## Front Panel

This section displays the front panel of all switches covered by this guide.


**Note:** All devices are designed to fit into a 19" rack. The appearance may be different than those shown based on the PSU and the fan modules used.

### C.1 Port-Speed Groups

For devices that support the port-speed group feature, the groups are called out in the relevant illustrations with the ports in the group identified.


Some of the devices shown in this section have ports that are grouped together to provide flexibility in configuring Ethernet speeds for the individual members of the group. The default configuration supports the maximum possible Ethernet speed and/or other lower, allowable speeds by the individual members of the group. Care must be taken when inserting optics for lower speed connectivity as further configuration may be required for the port(s) in the group to operate as desired.

### C.2 Front Panels

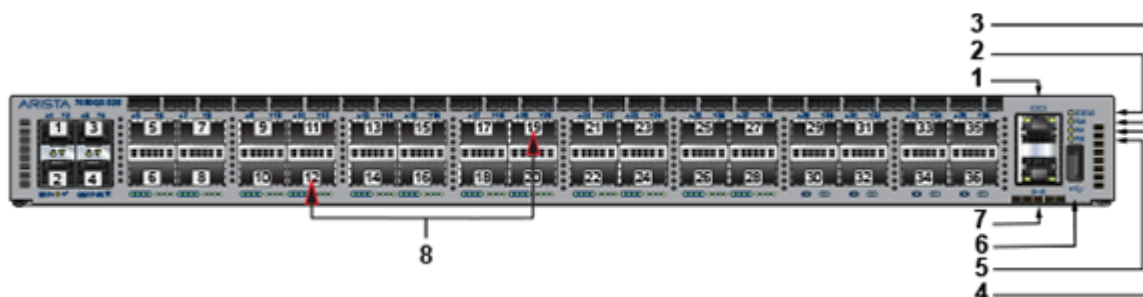


**Figure 31: DCS-7050QX-32S**

1	Console serial port	4	Power supply 1 status LED	7	Ethernet management port
2	System status LED	5	Power supply 2 status LED	8	Port numbers
3	Fan status LED	6	USB port		

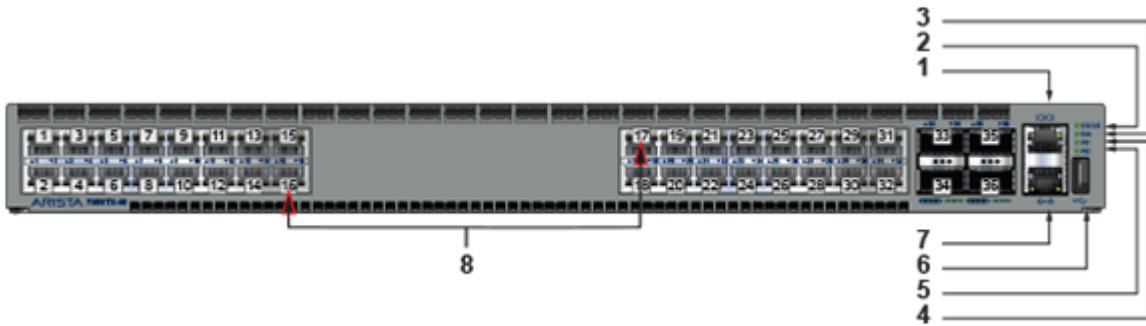


**Figure 32: DCS-7050TX-48**

- |   |                     |   |                           |   |                          |
|---|---------------------|---|---------------------------|---|--------------------------|
| 1 | Console serial port | 4 | Power supply 1 status LED | 7 | Ethernet management port |
| 2 | System status LED   | 5 | Power supply 2 status LED | 8 | Port numbers             |
| 3 | Fan status LED      | 6 | USB port                  |   |                          |

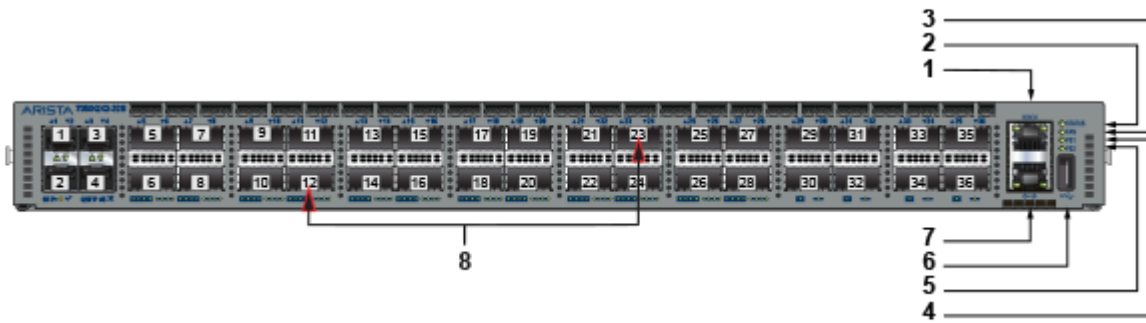

**Figure 33: DCS-7050QX2-32S**


- |   |                     |   |                           |   |                          |
|---|---------------------|---|---------------------------|---|--------------------------|
| 1 | Console serial port | 4 | Power supply 1 status LED | 7 | Ethernet management port |
| 2 | System status LED   | 5 | Power supply 2 status LED | 8 | Port numbers             |
| 3 | Fan status LED      | 6 | USB port                  |   |                          |

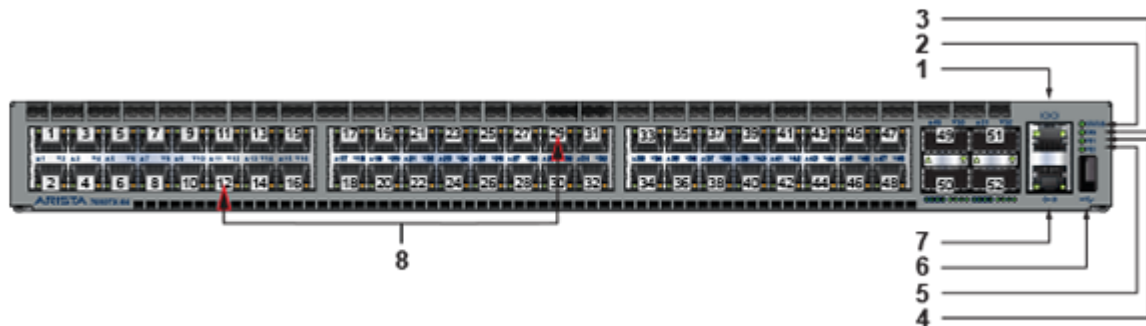

**Figure 34: DCS-7050TX-64**




1	Console serial port	4	Power supply 1 status LED	7	Ethernet management port
2	System status LED	5	Power supply 2 status LED	8	Port numbers
3	Fan status LED	6	USB port		

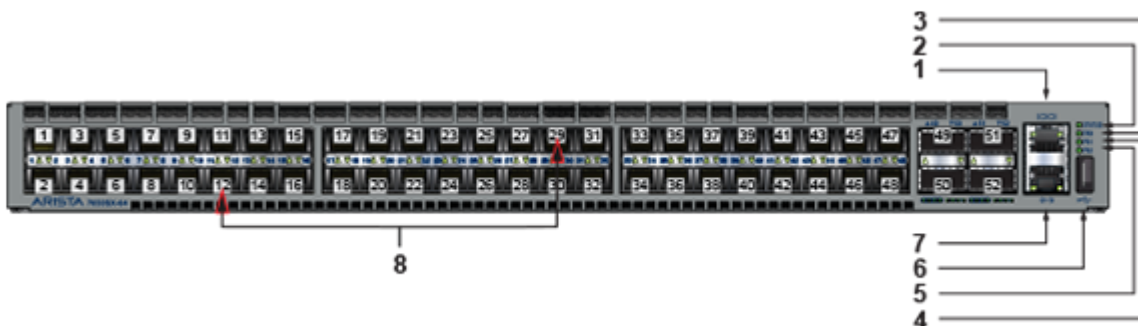


**Figure 35: DCS-7050SX-64**

1	Console serial port	4	Power supply 1 status LED	7	Ethernet management port
2	System status LED	5	Power supply 2 status LED	8	Port numbers
3	Fan status LED	6	USB port		

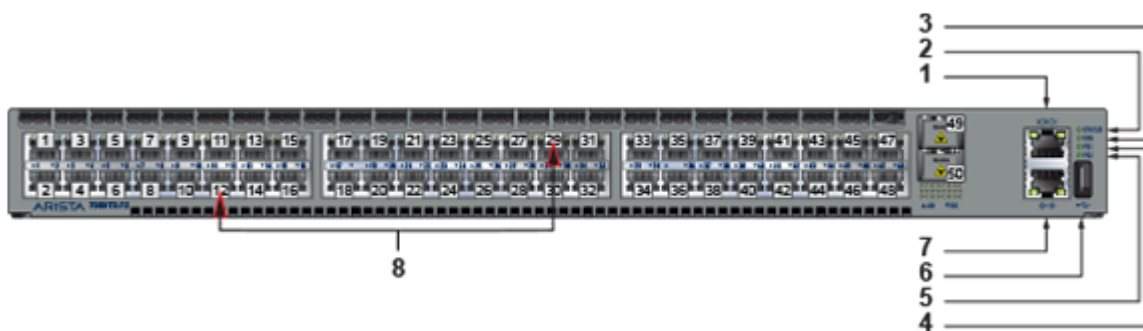


**Figure 36: DCS-7050TX-72**

1	Console serial port	4	Power supply 1 status LED	7	Ethernet management port
2	System status LED	5	Power supply 2 status LED	8	Port numbers
3	Fan status LED	6	USB port		

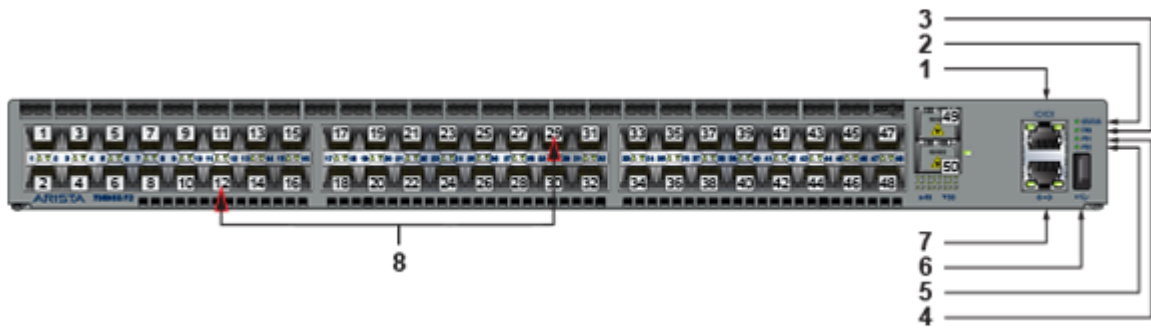

**Figure 37: DCS-7050SX-72**

- |   |                     |   |                           |   |                          |
|---|---------------------|---|---------------------------|---|--------------------------|
| 1 | Console serial port | 4 | Power supply 1 status LED | 7 | Ethernet management port |
| 2 | System status LED   | 5 | Power supply 2 status LED | 8 | Port numbers             |
| 3 | Fan status LED      | 6 | USB port                  |   |                          |

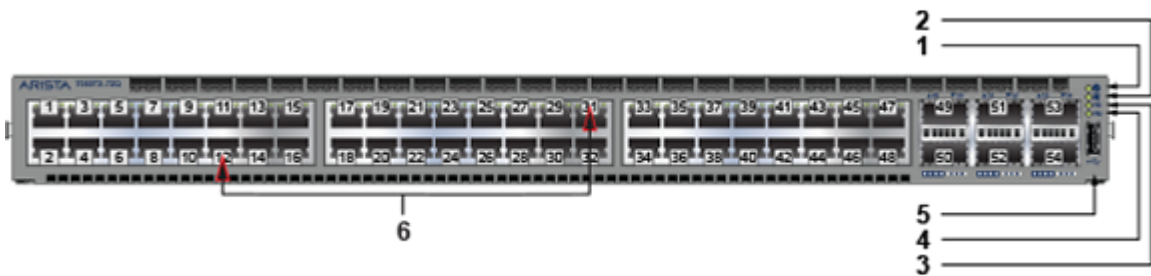

**Figure 38: DCS-7050TX-72Q**


- |   |                   |   |                           |   |              |
|---|-------------------|---|---------------------------|---|--------------|
| 1 | System status LED | 3 | Power supply 1 status LED | 5 | USB port     |
| 2 | Fan status LED    | 4 | Power supply 2 status LED | 6 | Port numbers |



**Figure 39: DCS-7050SX-72Q**

- |   |                   |   |                           |   |          |
|---|-------------------|---|---------------------------|---|----------|
| 1 | System status LED | 3 | Power supply 1 status LED | 5 | USB port |
|---|-------------------|---|---------------------------|---|----------|

- |   |                |   |                           |   |              |
|---|----------------|---|---------------------------|---|--------------|
| 2 | Fan status LED | 4 | Power supply 2 status LED | 6 | Port numbers |
|---|----------------|---|---------------------------|---|--------------|

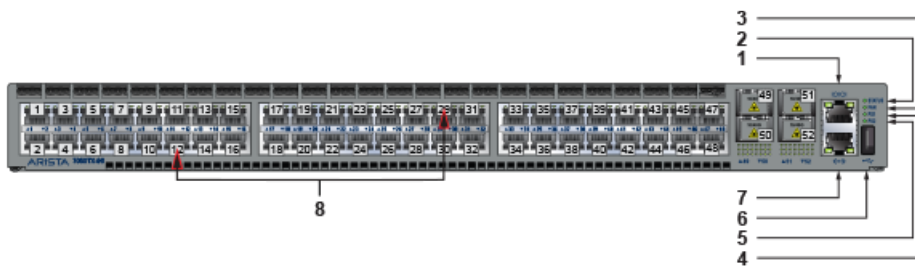


**Figure 40: DCS-7050TX-96**

- |   |                     |   |                           |   |                          |
|---|---------------------|---|---------------------------|---|--------------------------|
| 1 | Console serial port | 4 | Power supply 1 status LED | 7 | Ethernet management port |
| 2 | System status LED   | 5 | Power supply 2 status LED | 8 | Port numbers             |
| 3 | Fan status LED      | 6 | USB port                  |   |                          |




**Figure 41: DCS-7050SX2-72Q**

- |   |                   |   |                           |    |              |
|---|-------------------|---|---------------------------|----|--------------|
| 1 | System status LED | 3 | Power supply 1 status LED | 5  | USB port     |
| 2 | Fan status LED    | 4 | Power supply 2 status LED | 56 | Port numbers |

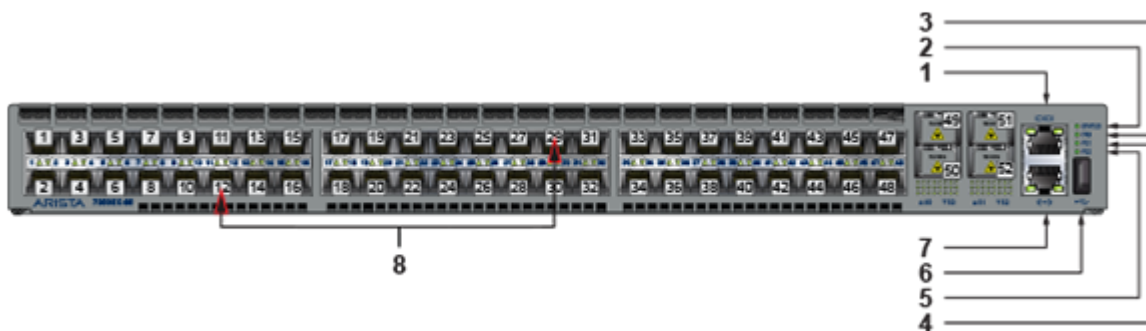


**Figure 42: DCS-7050SX-96**

- |   |                     |   |                           |   |                          |
|---|---------------------|---|---------------------------|---|--------------------------|
| 1 | Console serial port | 4 | Power supply 1 status LED | 7 | Ethernet management port |
| 2 | System status LED   | 5 | Power supply 2 status LED | 8 | Port numbers             |
| 3 | Fan status LED      | 6 | USB port                  |   |                          |

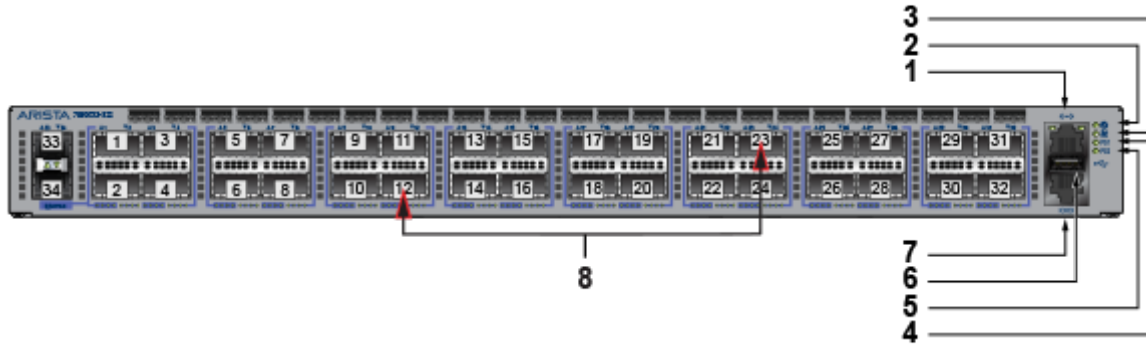


**Figure 43: DCS-7050CX3-32S**

- |   |                          |   |                           |   |                     |
|---|--------------------------|---|---------------------------|---|---------------------|
| 1 | Ethernet management port | 4 | Power supply 1 status LED | 7 | Console serial port |
| 2 | System status LED        | 5 | Power supply 2 status LED | 8 | Port numbers        |
| 3 | Fan status LED           | 6 | USB port                  |   |                     |

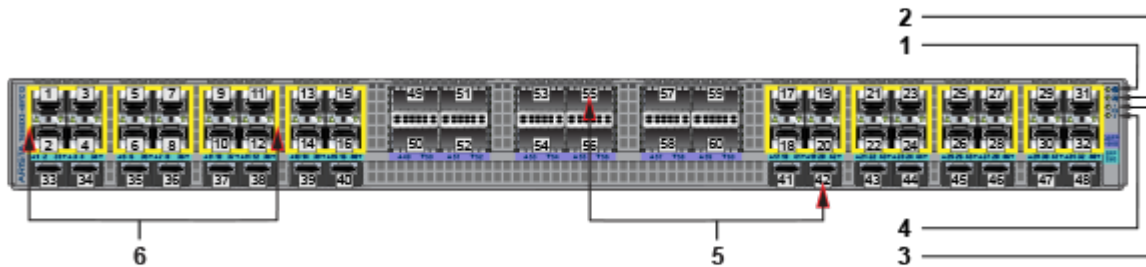


**Figure 44: DCS-7050SX3-48YC12**

- |   |                   |   |                           |   |                  |
|---|-------------------|---|---------------------------|---|------------------|
| 1 | System status LED | 3 | Power supply 1 status LED | 5 | Port numbers     |
| 2 | Fan status LED    | 4 | Power supply 2 status LED | 6 | Port-speed group |

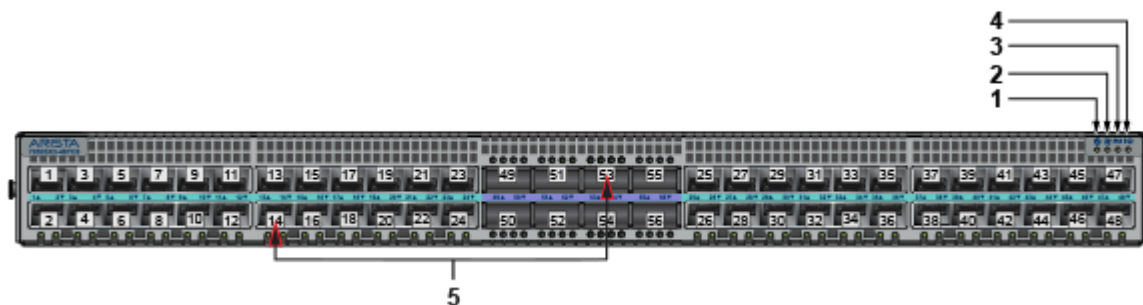


**Figure 45: DCS-7050SX3-48YC8**

- |   |                   |   |                           |   |              |
|---|-------------------|---|---------------------------|---|--------------|
| 1 | System status LED | 3 | Power supply 1 status LED | 5 | Port numbers |
| 2 | Fan status LED    | 3 | Power supply 2 status LED |   |              |

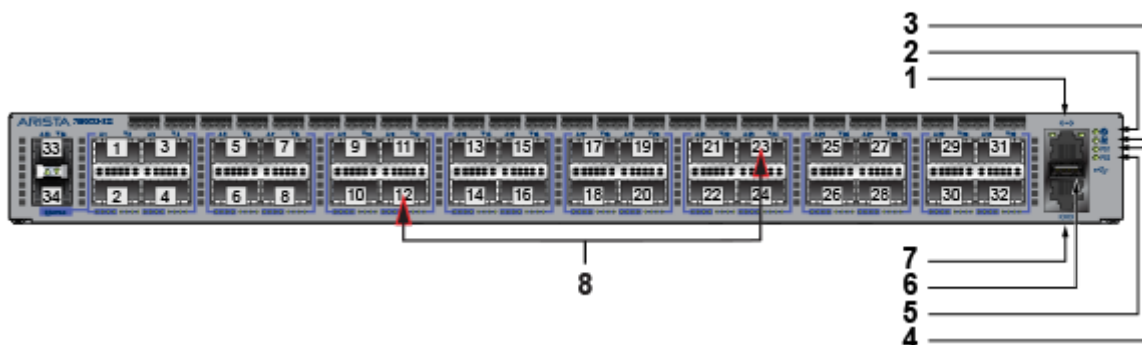

**Figure 46: DCS-7050CX3M-32S**


- |   |                          |   |                           |   |                     |
|---|--------------------------|---|---------------------------|---|---------------------|
| 1 | Ethernet management port | 4 | Power supply 1 status LED | 7 | Console serial port |
| 2 | System status LED        | 5 | Power supply 2 status LED | 8 | Port numbers        |
| 3 | Fan status LED           | 6 | USB port                  |   |                     |

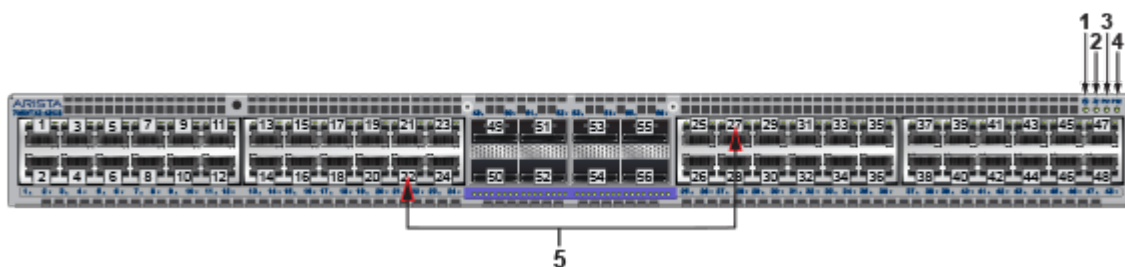

**Figure 47: DCS-7050TX3-48C8**

- |   |                   |   |                           |   |              |
|---|-------------------|---|---------------------------|---|--------------|
| 1 | System status LED | 3 | Power supply 1 status LED | 5 | Port numbers |
|---|-------------------|---|---------------------------|---|--------------|

- 2 Fan status LED
- 4 Power supply 2 status LED

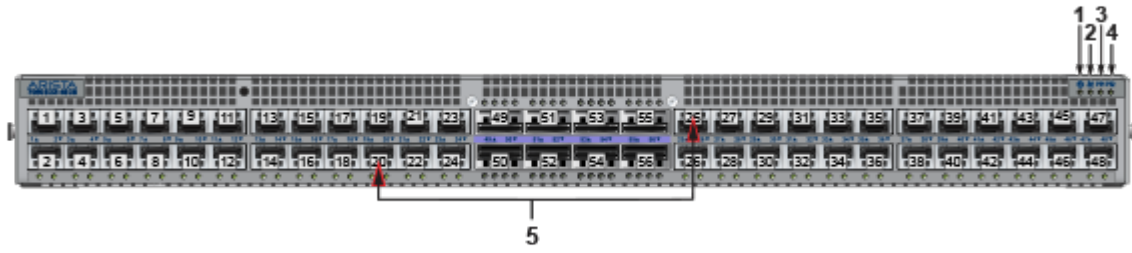

**Figure 48: DCS-7050SX3-48C8**


- 1 System status LED
- 2 Fan status LED
- 3 Power supply 1 status LED
- 4 Power supply 2 status LED
- 5 Port numbers

## Rear Panel

All switches covered by this guide use one of the rear panels shown below. Depending on the installed power supply module, the appearance could be different from those shown.


**Note:** All devices are designed to fit into a 19" rack. The appearance may be different than those shown based on the PSU and the fan modules used.

**Note:** Handle or label color indicates airflow direction.

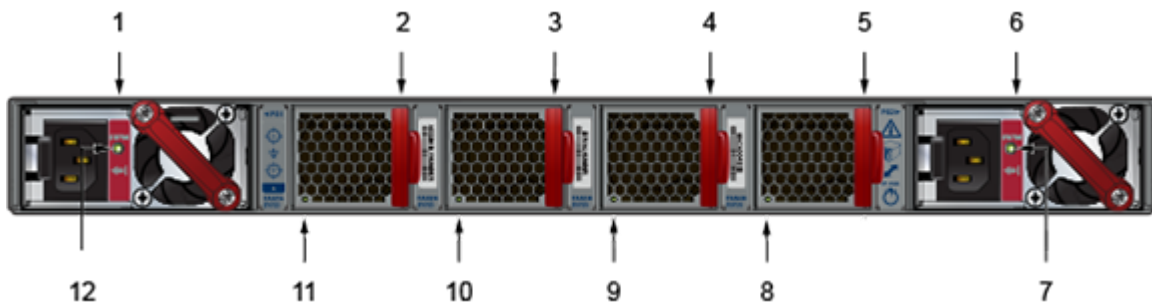

**Figure 49: Rear Panel for Models with Management Ports in the Front**

1	Power supply module 1	5	Fan module 4	9	Fan module 3 status LED
2	Fan module 1	6	Power supply module 2	10	Fan module 2 status LED
3	Fan module 2	7	PSU module 2 status LED	11	Fan module 1 status LED
4	Fan module 3	8	Fan module 4 status LED	12	PSU module 1 status LED

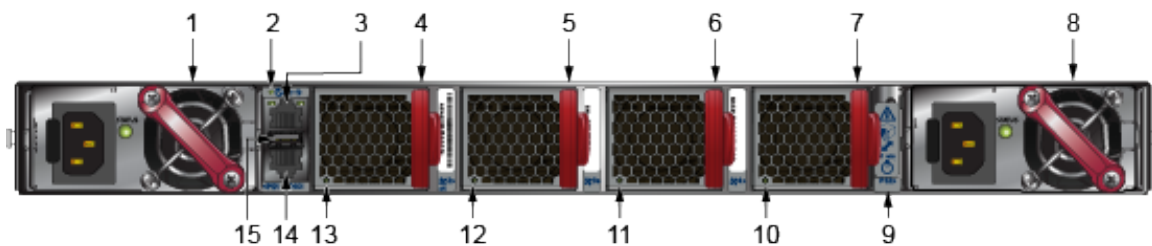

**Figure 50: Rear Panel for Models with Management Ports in the Rear**


1	Power supply module 1	6	Fan module 3	11	Fan module 3 status LED
2	System status LED	7	Fan module 4	12	Fan module 2 status LED
3	Ethernet management port	8	Power supply module 2	13	Fan module 1 status LED
4	Fan module 1	9	Earth grounding pad	14	Console serial port
5	Fan module 2	10	Fan module 4 status LED	15	USB port



**Figure 51: Rear Panel for Models with Management Ports in the Rear and two Dual-fan Modules**

1	Power supply 1 status LED	4	Fan module 2 handle	7	Fan module 2 status LED
2	Fan module 1 handle	5	Power supply 2 status LED	8	Fan module 1 status LED
3	Fan module bezel <sup>1</sup>	6	Power supply 2	9	Power supply 1

1. Bezel and handle color indicate airflow direction.

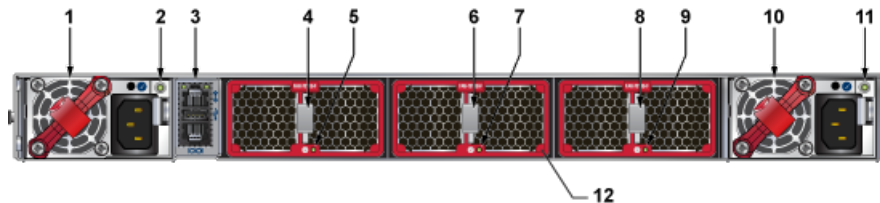

**Figure 52: Rear Panel for Models with Management Ports in the Rear and three Dual-fan Modules**

1	Power supply module 1	5	Fan module 1 status LED	9	Fan module 3 status LED
2	Power supply module 1 status LED	6	Fan module 2 release	10	Power supply module 2
3	Management ports	7	Fan module 2 status LED	11	Power supply module 2 status LED
4	Fan module 1 release	8	Fan module 3 release	12	Fan module bezel <sup>1</sup>

1. Bezel and handle color indicate airflow direction.




## Maintenance and Field Replacement

This section discusses the maintenance and replacement procedures for selected devices.

### E.1 Considerations


Tips and requirements for maintenance issues.

- All fans and power supplies are hot swappable.
- The switch can be running while a power supply is being installed or removed, but the power supply being replaced must not be connected to a power source.
- All slots must be filled or covered with a blank for operation (even though power supply or fans may not be functional).
- Before you begin, refer to the **Arista Networks document *Safety Information and Translated Safety Warnings*** available at: <https://www.arista.com/en/support/product-documentation>.

 **Note:** Descriptions for the removal and replacement of power supplies and fans are for a representative power supply or fan. Locations of status indicator LEDs may differ. Refer to the front and rear panel illustrations of your device to locate the appropriate LED.


### E.2 Power Supplies

The following steps are required when removing and replacing power supplies from a switch.

 **Note:** Only a representative power supply module is shown in [Figure 53: Removing and Installing Power Supply](#). For the location of the power supply on your switch, refer to [Rear Panel](#).

#### E.2.1 Removing a Power Supply

1. Ground yourself with an ESD wrist strap.
2. Power down the power supply to be removed by disconnecting the AC power cable.
3. Push the power supply release lever and remove the power supply.

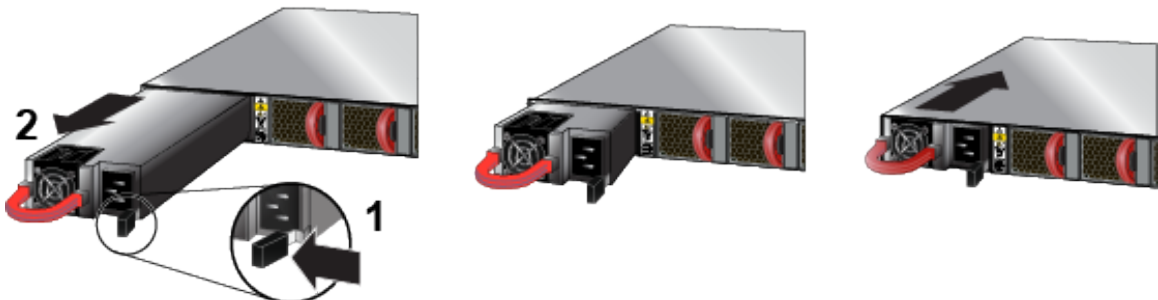


**Figure 53: Removing and Installing Power Supply**

- 1 Release lever
- 2 Remove PSU

## E.2.2 Installing a Power Supply

You must make space for installing the power supply by removing an existing one ([Removing a Power Supply](#)).

1. Remove the replacement power supply from its packaging.
2. Slide the new power supply into the empty slot.
3. Slide the new power supply into the switch until the power supply is fully seated and the release lever snaps into place ([Removing a Power Supply](#)).
4. Connect the power cord to the power supply.
5. Verify the LED(s) on the power supply.

 **Note:** The Power Supply status LED should be a steady green for normal operation.


6. Verify the new power supply operation by issuing the `show environment power` command.

```
switch#show environment power
```

The output of the command lists the power supplies in operation and includes the one you replaced.


## E.3 Fan Modules

Fan module requirements when hot swapping the modules.


 **Note:** Hot swap fans within 30 seconds to prevent the switch from overheating. Ensure that the module you are replacing matches those already installed in the switch.

### E.3.1 Removing a Fan Module

The following steps are required when removing or replacing fans from a switch.

 **Note:** Only a representative fan module is shown in [Figure 54: Removing Fan Module](#) . For the location of the fan modules on your switch, refer to [Rear Panel](#).

1. Ground yourself with an ESD wrist strap.
2. Push the fan module release lever and slide the fan module out of the switch ([Figure 54: Removing Fan Module](#) ).

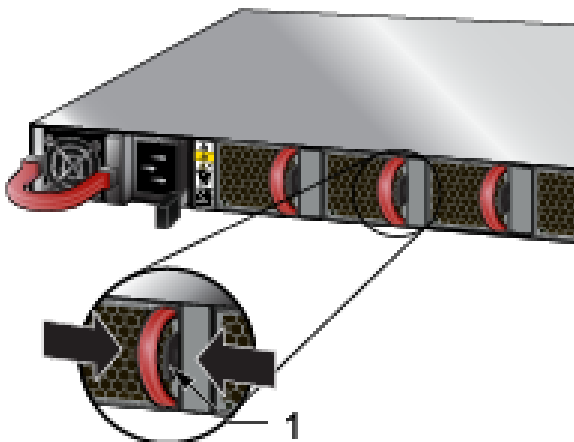


**Figure 54: Removing Fan Module**

1 Release lever

### E.3.2 Installing a Fan Module

You must make space for installing the fan module by removing an existing one ([Figure 54: Removing Fan Module](#)).

1. Remove the replacement fan from its packaging.
2. Slide the new fan module into the switch until the module is fully seated and the release lever snaps into place ([Figure 55: Inserting Fan Module](#)).

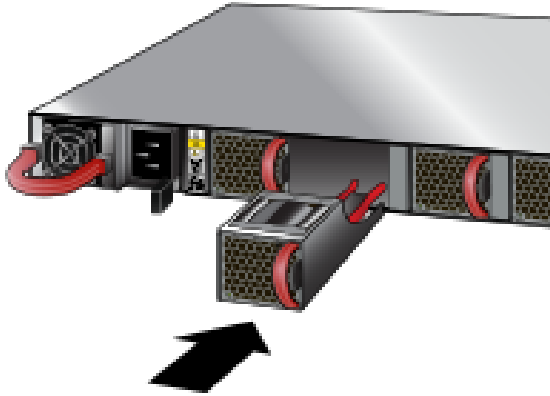

**Figure 55: Inserting Fan Module**

3. Verify that the fan module is working normally.



**Note:** The fan module status LED should be a steady green for normal operation.



# Regulatory Model Numbers

---

This appendix lists the regulatory model numbers (RMNs), where applicable, for the product models for the switches described in this document.

**Table 12: Regulatory Model Numbers and Product Numbers**

<b>Regulatory Model Number (RMN)</b>	<b>Product Number(s)</b>
AN1501	DCS-7050SX-72Q, DCS-7050SX2-72Q
AN1502	
AN1704	DCS-7050SX3-48YC12
AN1705	DCS-7050CX3-32S
AN1710	DCS-7050SX3-48YC8, DCS-7050SX3-48C8
AN1729	DCS-7050CX3M-32S
AN1727	DCS-7050TX3-48C8



## Taiwan RoHS Information

---

This appendix provides Taiwan RoHS information for switches covered by this guide.

For Taiwan BSMI RoHS Table, go to <https://www.arista.com/assets/data/pdf/AristaBSMIroHS.pdf>.

